

SI No.	Description of Item (2)	Amount per line item
		PEMA KHANGSAR MOTOR WORKS
1	Battery terminal end	75
2	A/C filter	5
3	Alternator Assy	11500
4	Alternator carbon bush	350
5	Alternator cut out	975
6	Anabond paste (Big)	150
7	Anabond paste (Small)	50
8	Back bumper	5
9	Back light Assy (Left)	650
10	Back light Assy (Right)	650
11	Battery cable +ive	350
12	Battery cable -ive	350
13	Bendix pinion	1450
14	Black tape	20
15	Brake light switch	250
16	Bulb 1141	20
17	Bulb 67	15
18	bush stabilizer	300
19	Carbon bush 12 v	250
20	Carbon holder	500
21	Carbon rocker 12v	1250
22	cloth piece	10
23	collant	245
24	dash board polish	300
25	Dial wrench (6-32mm)	1050
26	distilled water	20
27	Dust guard back and front	1450
28	Dynamo bearing	250
29	Dynamo rocker	650
30	Electric horn 2v	450
31	foot mat	1650
32	Front bumper	5850
33	fuel and water separator	2200
34	fuel pipe	350
35	Fuse 10 Amp	10
36	Fuse 15 Amp	10
37	Fuse 20 Amp	10
38	Fuse 25 Amp	15
39	Fuse 30 Amp	20
40	Fuse 5 Amp	10

41	Glow plug	5
42	Grease	340
43	Grease gun	1200
44	Head light Assy (Left)	5850
45	Head light Assy (Right)	5850
46	Head light bulb (Halogen)	250
47	Horn high	650
48	Horn low	450
49	Horn relay	150
50	horn switch	100
51	Hour meter	10
52	Ignition switch	1950
53	LT wire 5mm	25
54	LT wire 6mm	25
55	LT wire 8mm	50
56	Mobil (15w40)	425
57	nozzle pipe	250
58	Plastic lock	15
59	Plastic tape	20
60	PVC tape	20
61	Rain guard	25
62	Rear tail board railing	100
63	Rectifier	1250
64	Red paper	25
65	Relay 2 pin 12v	100
66	Relay 3 pin 12v	100
67	Relay 4 pin 12v	200
68	Relay 5 pin 12v	200
69	Rotor coil	1300
70	seat cover	25000
71	Self Armerture 12v	2750
72	Self bush 12V	50
73	Self carbon 12V	500
74	Self field coil 12v	1000
75	Self housing	1300
76	Self top cover	350
77	Solonoid switch 12v	1400
78	Speedo meter Assy	1500
79	Speedo meter cable	650
80	Speedo meter pinion	100
81	Starter coil	1500
82	Starter relay 12v	250
83	steering cover	550
84	Threading tape	25
85	vacuum nozzle pipe	5

86	vehicle no. plate	500
87	wheel Drum	3800
88	Wiper blade Assy	250
89	Wiper motor	2800
90	Wiring clip	5
91	Bearing 6202	250
92	Bearing 6302	250
93	Benjo washer	5
94	Cam shaft	6800
95	Cam shaft bush	350
96	Cam shaft gear	650
97	Connecting bearing	1850
98	Connecting bush	350
99	Coonecting rod	2950
100	Crank shaft	28000
101	Crank shaft oil seal	1250
102	Diesel filter	1800
103	Drain plug	50
104	Element Assy, Fuel	1800
105	Element sub assy, Air	2200
106	Engine head gasket	2150
107	Engine mounting	475
108	Engine pacing	1500
109	Engine ring	3500
110	Fan belt	595
111	Feed pump Assy	1800
112	Fuel filter	475
113	Fuel injection overflow pi	350
114	Fuel injector nozzel	975
115	Fuel injector pipe	475
116	Fuel pump Assy	65000
117	Fuel pump washer	10
118	Gas kit	250
119	Hydraulic jack (Heavy Dut	2850
120	Hydraulic jack (Light Duty	2200
121	Hydraulic jack oil seal (Set	650
122	Inner door lock (R)	285
123	Inner door lock(L)	285
124	Jack lever	1075
125	Main bearing	2150
126	Mobil	425
127	Mobile filter	750
128	Open end wrench set (6-3	1050
129	Piston	2200
130	Piston ring	3200

131	Rocker Arm	650
132	Rocker shaft	1650
133	Silencer box	3700
134	Silencer pipe	2200
135	Socket (6mm-32mm)	4500
136	Tappid cover packing	200
137	Thrust washer	300
138	Timing cover oil seal	675
139	Timing belt	10
140	Timing cover	500
141	Timing cover gear	1200
142	Valve guide	750
143	Valve key	50
144	Valve seal	100
145	Valve spring	100
146	Valve washer	50
147	Wheel wrench	850
148	Wiper Arm	395
149	Wiper blade	250
150	Wiper motor Assy	2850
151	Axel lock	50
152	Axel shaft	3800
153	Axel shaft oil seal	5
154	Axel spacer	45
155	Back gear bearing	395
156	ball joint	5
157	C.V joint	5
158	Center bearing	975
159	Clutch cylinder (lower)	1500
160	Clutch cylinder (Upper)	2100
161	Clutch cylinder Assy	2100
162	Clutch cylinder kit	500
163	Clutch kit	500
164	Clutch kit box	50
165	Clutch plate (Fan Type)	10
166	Clutch plate (Round Type)	5150
167	Clutch relese bearing	1650
168	Clutch rod	295
169	Cross bearing	1650
170	Cross holder	2150
171	Cross propeller shaft	1650
172	Crown tail assy	18500
173	Fly wheel	4850
174	Fly wheel ring	1200
175	Front hub bearing inner	1350

176	Front hub bearing outer	1150
177	Gear box mounting	450
178	Gear box oil seal	350
179	Gear box packing	350
180	Gear counter	6800
181	Gear oil	385
182	Gear pinion	1250
183	Gear pinion shaft	1500
184	Hubs bearing	1350
185	Hubs checknut	100
186	Hubs checknut lock	75
187	Master cylinder	2500
188	Master cylinder kit	950
189	Pilot bearing	635
190	Pressure plate	4850
191	Propeller shaft	3000
192	Propeller shaft bolt	45
193	Rear hub bearing inner	1350
194	Rear hub bearing outer	1250
195	Relese bearing fork	350
196	Relese bearing lock	75
197	Tail pinion bearing (inner)	1500
198	Tail pinion bearing (Outer	1500
199	Tail pinion chechnut wash	75
200	Tail pinion checknut	150
201	Tail Pinion oil seal	550
202	Top shaft bearing	750
203	Wheel bearing inner (Fron	1350
204	Wheel bearing inner (Rea	1650
205	Wheel bearing oil seal inn	200
206	Wheel bearing oil seal inn	200
207	Wheel bearing outer (Fro	1150
208	Wheel bearing outer (Rea	1350
209	Wheel cylinder	1250
210	Wheel cylinder bucket	250
211	Wheel nut	350
212	Accelerator cable	425
213	Brake Booster Assy	8500
214	Brake Booster kit	750
215	Brake cam	1250
216	Brake cam Arm	650
217	Brake cam Arm lock	100
218	Brake cam bush	150
219	brake disc	5
220	Brake flexible pipe (Front)	5

221	Brake fluid dot3	145
222	brake light bulb	20
223	Brake lining	2200
224	Brake oil	145
225	Brake pad	5
226	Brake pipe (Rear)	750
227	Brake servo	12500
228	Brake shoe	2200
229	Brake shoe lock with sprin	1900
230	Break bucket	250
231	Break lining back and fron	2200
232	Break shoe	1900
233	Controlling cylinder Assy	2750
234	Controlling pipe	350
235	Controlling switch Assy	3250
236	Dual brake valve Assy	3450
237	Hand brake cable	5
238	Oil seal	50
239	Spring 2nd leaf (R)	2200
240	Spring 2nd leaf (F)	1900
241	Spring 3rd leaf ®	1800
242	Spring 3rd leaf (F)	1500
243	Spring 4th leaf ®	1500
244	Spring 4th leaf (F)	1050
245	Spring 5th leaf ®	1000
246	Spring 5th leaf (F)	1000
247	Spring 6th leaf ®	1000
248	Spring 6th leaf (F)	900
249	Centre bolt	100
250	Cycle pin	250
251	Helper leaf Spring	1500
252	Main leaf spring (R)	2200
253	Main leaf spring (F)	2100
254	Shock absorber	1500
255	Shocker nut bolt	100
256	Spring buffer mounting	550
257	Spring bush	200
258	Spring clamp	275
259	Spring cycle pin	300
260	Spring hanger	1250
261	Spring pin	300
262	Spring shackle	800
263	U bolt	450
264	U bolt nut	50
265	U bolt plate	5

266	Air filter	2450
267	Air filter hose pipe	850
268	Coolant	295
269	Exhaust manifold	2500
270	Hose pipe clamp	50
271	Hydraulic filter	5
272	Hydraulic oil	200
273	Hydraulic pipe	100
274	Intake manifold	2200
275	Radiator assy	12500
276	Radiator cap	250
277	radiator hose pipe (Lower	450
278	Radiator hose pipe (Uppe	450
279	Vacuum pipe	500
280	Arm bushing lower big	5
281	Arm bushing lower small	5
282	Power steering box Assy	28500
283	Steering adjuster bolt Ass	100
284	Steering box oil seal	100
285	Steering column (Inner)	500
286	Steering column (Outer)	500
287	Steering cross	1650
288	Steering cross bearing	1650
289	Tie rod end	1150
290	Back glass	1200
291	Front Windshield glass	9500
292	Looking glass (R)	450
293	Looking glass (L)	450
294	Window glass	1250
295	Power steering bearing	500
296	Power steering oil	450
297	Power steering pipe	750
298	Head light assembly	4500
299	Head light bulb	150
300	Head light cover	550
301	Indicator light	200
302	Side light	150
303	Gear Box Opening and fitt	2000
304	Spring opening and fitting	650
305	A/c filter changing	10
306	Accelerator cable changin	200
307	Air compressor leakage re	250
308	Air Element changing	150
309	Air filter changing	150
310	Air filter hose pipe changi	100

311	Air filter servicing	150
312	Air tank opening & refittin	450
313	Air unloader opening & n	450
314	Alternator cut out changi	250
315	Alternator overhauling	650
316	Arm bush change charges	10
317	Back light assy changing	100
318	Back light bulb changing	100
319	ball joint changing	10
320	Battery box new making	100
321	Battery cable changing	100
322	Battery change	100
323	Battery terminal changing	100
324	Bendix pinion repairing &	250
325	Brake adjuster opening &	450
326	Brake cam bush opening	150
327	Brake diafam opening &	350
328	Brake dise cutting	10
329	brake disc changing	10
330	Brake drum cutting	650
331	Brake dual valve kit chang	450
332	Brake flexible pipe changi	200
333	Brake lining changing	650
334	brake pipe bleasting	150
335	Brake pipe changing	150
336	Brake pipe leakage repair	200
337	Brake servo Changing	350
338	Brake servo repairing & s	550
339	Brake Shoe Changing	400
340	Brass blezzing	150
341	Carbon soldering	100
342	Center bearing changing	450
343	Clutch plate changing	2500
344	Clutch release bearing ch	100
345	Coil Spring changing	10
346	collant change	100
347	Controlling overhauling	1200
348	Controlling pipe changing	150
349	Cross bearing changing	450
350	Cross bearing greasing	350
351	Cross Coupling cutting by	400
352	Cross holder cutting and	250
353	Crown Overhauling	1500
354	CV joint changing	10
355	Cycle pin changing	200

356	denting and painting	3500
357	Door lock new making	250
358	Dynamo bearing changing	125
359	Electric welding	100
360	Engine head gasket chang	1500
361	Engine mount changing	250
362	Engine oil changing	150
363	Engine Twining	350
364	Engine water pump chang	550
365	Fan belt bearing changing	350
366	Fan belt changing	250
367	Feed pump assy changing	250
368	Feed pump repairing	350
369	Fly wheel changing	1500
370	Fly wheel changing	1500
371	Fly wheel poolishing	1200
372	fuel and water separator	100
373	Fuel filter changing	100
374	Fuel injection pump open	1500
375	Fuel over flow pipe chang	250
376	fuel pipe changing	245
377	Fuel tank opening & fittin	650
378	Fuel tank servicing	950
379	Full Engine Overhauling	8500
380	Gear oil changing	100
381	Gear shaft changing	450
382	Gear shaft polishing	100
383	Half Engine Overhauling	3500
384	Head light assy changing	150
385	Head light bulb fitting	100
386	horn and switch fitting	250
387	Horn fitting	150
388	Horn relay fitting	100
389	Hub greasing (Fr)	350
390	Hub greasing (Rear)	350
391	hubs bearing changing	350
392	Hydraulic control valve op	10
393	Hydraulic filter changing	10
394	Hydraulic hose pipe chang	10
395	Hydraulic oil changing	10
396	Hydraulic pipe changing	10
397	Hydraulic pipe leakage re	10
398	Hydraulic pump & pipe lin	10
399	Hydraulic tank servicing	10
400	Ignition switch changing	250

401	Inner wheel bearing chan	100
402	Inner wheel bearing chan	100
403	Inner wheel bearing oil se	100
404	Inner wheel bearing oil se	100
405	King pin bush machinery c	1250
406	King pin overhauling both	1200
407	KM cable changing & refit	350
408	Lower clutch kit changing	250
409	Lower Radiator hose pipe	150
410	Master cylinder changing	300
411	Master cylinder kit changi	350
412	Master cylinder repairing	350
413	mobile filter changing	100
414	Number Plate change	100
415	Outer wheel bearing chan	100
416	Outer wheel bearing chan	100
417	Outer wheel bearing oil s	100
418	Outer wheel bearing oil s	100
419	Power steering overhauli	2500
420	Power steering pump cha	750
421	Pressure plate changing	650
422	Pressure water pump rem	350
423	Propeller shaft york chan	650
424	PTO bracket new making	100
425	PTO bracket removal	100
426	PTO pump servicing	100
427	Quarter pin changing	250
428	Radiator assy changing	650
429	Radiator repairing & servi	2500
430	Rain guard fitting	10
431	Rear bumpeer open fittin	750
432	Rear hydraulic jack openi	100
433	recovery van hiring charg	2500
434	Release bearing changing	250
435	Release bearing fork chan	100
436	Release bearing lock chan	100
437	Seal kit changing	100
438	Seat new making	2000
439	Self Bush changing	200
440	Self carbon changing	200
441	Self Overhauling	850
442	Self rewinding	100
443	Shock absorber changing	150
444	Side door glass changing	450
445	Solonoid switch changing	150

446	Spring buffer mounting ch	100
447	Spring bush changing	350
448	spring clam welding	200
449	Spring clam changing	450
450	Spring hanger changing	450
451	Spring pin bush changing	300
452	Spring Shackle pin changi	250
453	Steering box kit changing	200
454	Steering box oil seal chan	500
455	Steering box overhauling	2500
456	Steering Column changing	100
457	Steering Column changing	100
458	Steering cross bearing cha	450
459	Steering cross changing	200
460	Steering rack changing	10
461	Steering wheel opening &	300
462	Tail pinion oil seal change	450
463	Tailgate Repairing	200
464	Tappet adjusting	450
465	Tie rod end changing	450
466	Tie rod kit changing	450
467	Timing belt changing	10
468	Timing cover gear changin	150
469	Transmission half overha	1000
470	Transmission over hauling	3500
471	U bolt changing	450
472	Upper clutch kit changing	250
473	Upper Radiator hose pipe	150
474	Vaccum pipe changing	450
475	vacuum nozzle pipe chang	200
476	Vacuum pipe socket chan	200
477	Valve O ring changing	100
478	Valve oil seal changing	100
479	Valve spring changing	100
480	Water filter changing	100
481	Water level indicator pipe	100
482	Water pump assy servicin	100
483	Water separator changing	100
484	Water separator servicing	100
485	Wind shield replacing	4500
486	Wiper arm changing	100
487	Wiper blade changing	100
488	Wiper motor changing	250


